

Hot Air Pencil

Made in China

Statement: The company reserves the right to improve & upgrade products, product specifications and design are subject to change without notice.

OPERATION
INSTRUCTION

English

本产品不应被扔在垃圾桶内。根据欧盟条款2012/19/EU，电子设备在其寿命结束后必须被回收并转运至授权回收工厂。
● This product should not be thrown in the garbage. In accordance with the European directive 2012/19/EU, electronic equipment at the end of their life must be collected & returned to an authorized recycling facility. ● Este producto no debe desecharse en la basura. De acuerdo a la directiva europea 2012/19/EU, los equipos electrónicos al final de su vida se deberán recoger y trasladar a una planta de reciclaje autorizada. ● Dieses Produkt sollte nicht mit dem Hausmüll entsorgt werden. In Übereinstimmung mit der europäischen Richtlinie 2012/19/EU müssen elektronische Geräte am Ende ihrer Lebensdauer eingesammelt und einem autorisierten Recyclingbetrieb zugeführt werden.

Thank you for purchasing this product. Please read the manual carefully before operating and keep this manual for future reference.


SPECIFICATION

Model Number	8858 II	8858 III
Control Unit Dimensions	L222*W48*H45 mm ±5mm	
Temperature	150°C~250°C/302 °F~482°F(140W) 250°C~350°C/482 °F~662°F (300W)	
Operating Ambient Temperature	0°C~40°C/32°F~104°F	

II. PURPOSES

It is suitable for solidified clay, softening paint, heat shrinkable sheet, shrinkable heat shrinkable tube, packaging, etc. It is especially suitable for DIY handicraft producers.

III.PRODUCT DIAGRAM

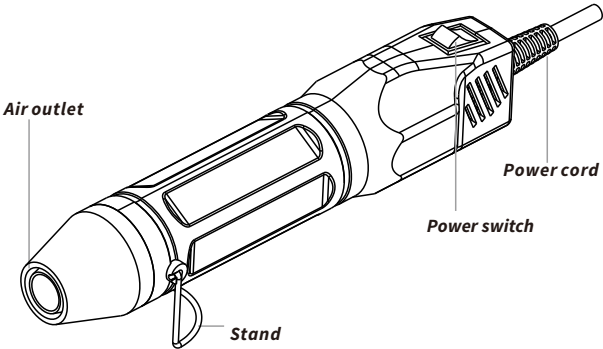

(8858-III Three-Pole slider power switch, 'I' Position: 140W, 'O' Position: OFF, 'II' Position: 300W)

IV. OPERATING GUIDELINES

1. Open the holder toward the power cord.
2. Connect the power cord, turn on the power switch, and the hot air pen starts to blow hot air. Pick up the hot air pen, adjust the distance between the outlet of the hot air pen and the item, and properly heat the item.

Warning: Do not block the air outlet with objects.

3. After working, turn off the power switch. If not used for a long time, unplug the power cord.

V. NOTICE

1. Do not touch the air outlet, beware of burns.
2. The hot air pen blows cold air, indicating that the heating core is damaged and needs to be replaced.